

*e***-Dial**<sup>™</sup> App Instruction Manual



### Download the Free Rochester Gauges e-Dial™ App Today!









e-Dial™ App Instruction Manual



## Contents


| e-Dial™ App Instruction Manual  | 1  |
|---|----|
| e-Dial™ Set Up Modes (Stand Alone or paired with e-Temp Temperature Sensor) | .2 |
| Stand Alone Mode  | .2 |
| Paired with e-Temp™ Temperature Sensor Mode                                 | .5 |
| Main Menu Option  | 7  |
| Main Menu   | 8  |

## e-Dial™ App Instruction Manual

When the e-Dial<sup>™</sup> app is first opened, it will scan for a list of e-Dials<sup>™</sup> (powered on) nearby to connect to. Please Allow the app a few moments to complete scanning for available e-Dials<sup>™</sup> before selecting a specific e-Dial<sup>™</sup> and "Connect".

| 2:26 🖻         | •• <sup>™</sup> ∡0               |  |  |  |  |
|----------------|----------------------------------|--|--|--|--|
| ADD A NEW DIAL |                                  |  |  |  |  |
|                | O Scanning                       |  |  |  |  |
|                | MY DIALS:                        |  |  |  |  |
|                | EDialBLE<br>MAC ID: F8F005FE295C |  |  |  |  |
|                |                                  |  |  |  |  |
|                |                                  |  |  |  |  |
|                |                                  |  |  |  |  |
|                |                                  |  |  |  |  |
|                |                                  |  |  |  |  |
|                | CONNECT                          |  |  |  |  |
|                |                                  |  |  |  |  |

Application scanning for nearby e-Dials™ to connect to

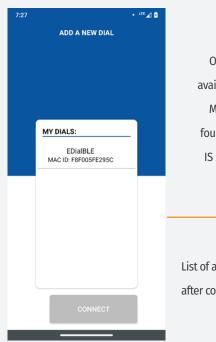


Once the App has completed scanning for available e-Dials<sup>™</sup>, they will be displayed by MAC ID. The MAC ID of the e-Dial<sup>™</sup> can be found etched on the dial bezel or top of the IS safety barrier box. Select the e-Dial<sup>™</sup> to connect to and select "Connect"

List of available e-Dials™ available to connect to after completion (Scanning no longer shown)



# e-Dial<sup>™</sup> Set Up Modes (Stand Alone or paired with e-Temp Temperature Sensor).

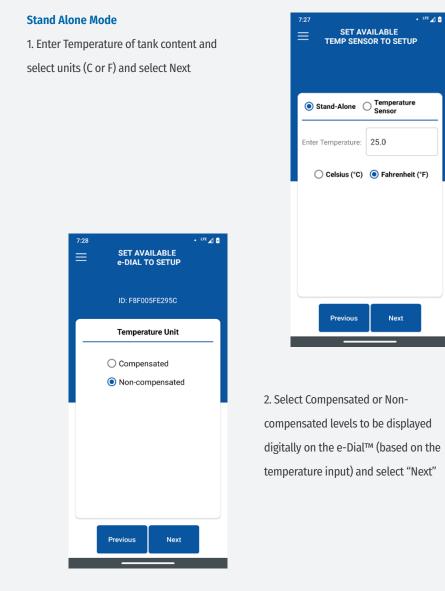



 Select percentage of measure (5-95% typical for Mobile Tank Applications,
 97% typical for Bulk/Stationary Tanks),
 once complete select Next

| 1 | 7:28          |           | • LTE 🔟 🖻            |  |
|---|---------------|-----------|----------------------|--|
| - | =             | ALARM     | SET POINT            |  |
|   |               |           | MAC ID: F8F005FE295C |  |
|   |               | ALARM 1   | ⊙ On ◯ Off           |  |
|   |               | 15        | 5.0 %                |  |
|   |               | Default S | etpoint : 15.0%      |  |
|   | TRIGGER DELAY |           |                      |  |
|   |               | 10        | Seconds              |  |
|   |               | ALARM 2   | ● On 🔵 Off           |  |
|   |               | 80        | 0.0 %                |  |
|   |               | Default S | etpoint : 80.0%      |  |
|   |               | Previous  | Next                 |  |
|   |               | _         |                      |  |
|   |               |           |                      |  |

| 9:37 $\circledast$ • $ℝ$ ♥<br><b>PERCENTAGE OF MEASURE</b><br>$\left(\left(\left((\bullet)\right)\right)\right)$ | 1 |
|--|---|
| Percentage of Measure  |   |
| <b>()</b> 5-95%  |   |
| <b>3-97%</b>   |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
| Previous Next  |   |
|  |   |

4. Set Alarm Points for Alarm 1 and Alarm
2. Trigger Delay is the time from alarm is triggered on e-Dial™ to App notification.
Once alarm points are set, select "Next"

**≡** SPECIFIC GRAVITY SETTING

ID: F8F005FE295C

0.5078 LPG
 0.5631 ISO Butane
 0.5644 N.Butane
 0.6170 NH3
 User Defined

Previous

 
Next


7:28

• LTE 🖌 🖻




5. Select Tank Content Specific Gravity. If specific gravity of tank content not listed, enter a user defined specific gravity.Once this is complete Select Next




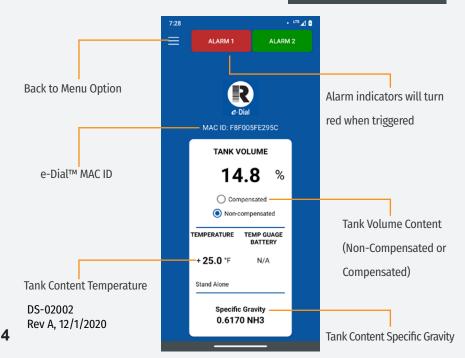

#### Paired with e-Temp Temperature Sensor Mode

1. Select Temperature Sensor Option

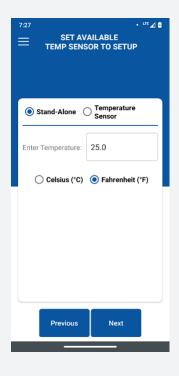


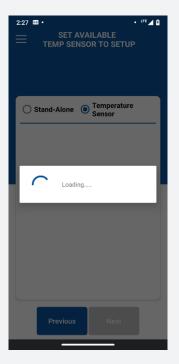

2. Once Temperature Sensor Option is Selected, App will promptly scan for nearby available Temperature Sensors to connect to. Please allow the app to complete scanning before selecting Temperature Sensor to connect to



3. Available Temp Sensors will be listed by MAC ID. Temp Sensor MAC ID can be found stamped on top of the Temp Sensor case. Select the Temp Sensor to connect to and select Next

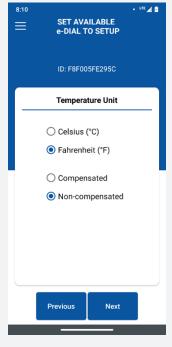


| 8:10  |  |
|---|--|
| Stand-Alone  Temperature Sensor               |  |
| F8F005FE2930(-50)<br>Temp Sensor F8F005FE2930 |  |
|   |  |
|   |  |
|   |  |
| Previous Next                                 |  |
|   |  |

4. Select Tank Content Temperature Unit (in C or F) and Compensated or Non-compensated levels to be displayed on the e-Dial<sup>™</sup>. Once complete, select Next

5. Complete steps 3 thru 5 in Stand-Alone Mode


 e-Dial<sup>™</sup> paired with Temperature Sensor set up is now complete and the following screen is displayed below

DS-02002 Rev A, 12/1/2020

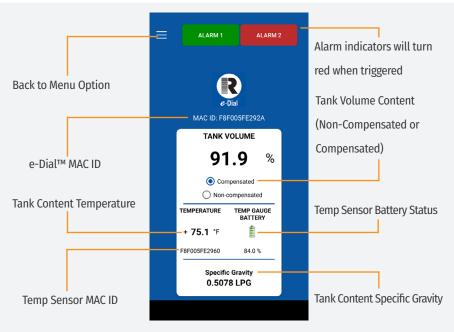

## **Main Menu Option**

Once e-Dial<sup>™</sup> set up is complete (Stand Alone or Connect to Temperature Sensor Mode), user can go back to the Main Menu to make any changes on existing settings by selecting the three horizontal lines on the upper left corner on the final set up screen

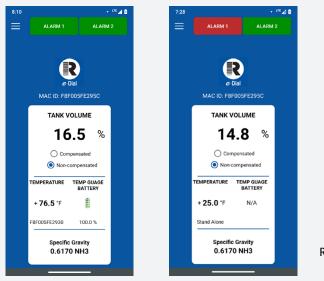

e-Dial<sup>™</sup> App Instruction Manual



## Main Menu

| 9:29                   | N 💎 🕯 |
|------------------------|-------|
| E-DIAL                 |       |
|                        |       |
| HOME                   |       |
|                        |       |
| DIALS                  |       |
|                        |       |
| SET TEMPERATURE SENSOR |       |
|                        |       |
| SET TEMPERATURE UNIT   |       |
|                        |       |
| PERCENTAGE OF MEASURE  |       |
|                        |       |
| ALARM SET POINT        |       |
|                        |       |
| SPECIFIC GRAVITY       |       |
| RESET CONFIGURATION    |       |
| RESET CONFIGURATION    |       |
|                        |       |

- **Dials:** Scan and connect to different e-Dial™
- Set Temperature Sensor: Switch the e-Dial<sup>™</sup> version as Stand Alone version to connect to Temperature Sensor and vice versa
- Alarm Set Point: Set new Alarm Set Points
- **Specific Gravity:** Set new Tank Content Specific Gravity
- **Type of Mount:** Change percentage of measure from 5-95% to 3-97% and vice versa
- **Reset Configuration:** This feature will rest the app and default back to scanning for new e-Dials™ to connect to

DS-02002 Rev A, 12/1/2020

8

e-Dial™ App Instruction Manual

| Notes |   |
|-------|---|
| NOLES |   |
|       |   |
|       | — |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       | _ |
|       |   |
|       | — |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       | - |
|       |   |
|       | — |
|       |   |
|       |   |
|       |   |
|       |   |
|       | — |
|       |   |
|       | - |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |
|       | — |
|       |   |
|       | — |
|       |   |
|       | _ |
|       |   |
|       |   |
|       | _ |
|       |   |
|       | - |
|       |   |
|       | _ |
|       |   |
|       |   |
|       |   |
|       |   |
|       |   |





DS-02002 Rev A, 12/1/2020 Rochester Gauges LLC Customer Service, Toll Free (888) 723-5549 11616 Harry Hines Blvd. • P.O. Box 29242 • Dallas, TX 75229 For more information visit rochestergauges.com ISO 9001:2015 CERTIFIED